



GLEDOPTO

AquaX WL1

**Dual Channel Fuse
WLED Digital Controller**

GL-C-812WL

Product Parameter >>>

Model: GL-C-812WL

Total Output Current: 15A Max

Material: Flame retardant PC

Temperature: -20~45°C

Input Wire: 2x2.5² (25cm)

Input Voltage: DC 5-12-24-36-48V

Output Current/Channel: 10A Max


Waterproof Rating: IP67

Recommended 1600 ICs Max

Output Wire: 3x1.0² (30cm)

Wiring instructions:

WLED controller supports connecting up to two digital LED strips. The output terminals labeled 'V+', 'GPIO16, GND'; 'V+', 'GPIO2, GND' should be connected to the LED strip's 'VCC', 'DATA', 'GND'.

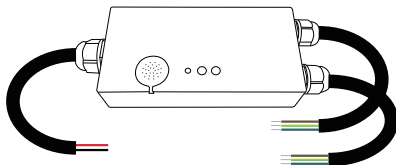

INPUT

— V+
— V-

 
OUTPUT

— V+
— DATA
— GND

APP Download Method >>>

IOS

Search for and download **WLED** in the App Store.



Android

Search for and download **WLED/**
WLED Native in the Google Play Store.

APP Configuration Steps >>>

1. Power on the WLED controller.
2. Open the phone settings and enter WiFi settings, find "WLED-AP" and connect to it with the password "wled1234".



3. After successful connection, it will automatically jump to the WLED page (or enter the website 4.3.2.1 in the browser to enter the WLED page).

4. Click "WIFI SETTINGS", set the WiFi account and password, and then click "Save & Connect" at the top of the screen to save.



5. Keep both your phone and the WLED controller connected to the same Wi-Fi network. Then, open the WLED-Native APP, and the WLED controller will be displayed in the list.

 


Note:

1. After the WLED controller disconnects from the router, the chip will restart and return to the preset state (you can find the hotspot "WLED-AP" in your phone's WiFi settings).
2. If the WLED controller is not displayed or cannot be found in the APP, you can open a browser, enter the IP address of the WLED controller, and use the web interface for control (To find the controller's IP address: Connect to the Wi-Fi, locate the router's or controller's web address (usually found at the bottom of the router or on the controller itself), enter this address in the browser, and then you can view the controller's IP address in the router's backend interface).

LED Strip Configuration >>>

Enter into the WLED control page and click on the "Config" button in the upper right corner. Then, select "LED Preferences" and navigate to "Hardware setup" to configure the LED strip information.




Mic Configuration >>>

Enter the WLED control page, click "config" in the upper right corner, select "Usermods", find "AudioReactive", check (Enabled), and then configure according to the configuration information under "Digitalmic". After the configuration is completed, click "save". After the successful save, turn off the controller.

Configuration Information:

1. Type: Generic PDM 2. Pin I2S SD: 32 3. Pin I2S WS: 15

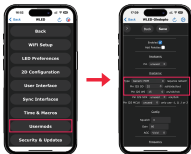

Note:

1. The Mic function is configured by default.
2. After microphone function configured, it will be only activated after rebooting the controller again.

Relay Configuration >>>



Enter into the WLED control page, click on the top right corner "Config", select "LED Preferences", then find "Relay GPIO". Configure Relay GPIO as 18, check Invert, and click Save to apply the settings.

note:

1. The relay function is configured by default.
2. When turning off the light via the APP, remote control, or PUSH switch, the power supply to the output terminal will be cut off to save energy. It should be noted that this function cannot deactivate the supplementary power supply.

Reset to Factory Settings >>>



1. Button Reset

Long press the "Function" button for 10 seconds.

2. APP Reset

Enter into the WLED control page and click on the top right corner "Config". Click on "Security & Updates" at the bottom, and then scroll down to find "Factory reset" and check the box. Click "Save" to reset the controller.

Description of Button Functions >>>

Restart (EN):

Pressing the button will power off the controller module, releasing it will power it back on. Useful when the controller needs to be restarted after configuring the microphone.

Funciton (GPIO17):

1. Short press: Power on/off.
2. Long press for 1 second: Switch color.
3. Long press for 10 seconds: Reset the WLED controller and activate the WLED-AP hotspot.



WLED remote controller connection >>>

1. Please ensure that WLED Remote is in a good WiFi environment.
2. Go to the WLED controller's control page, click "Config" in the top right corner, select "WiFi Setup", scroll down to the bottom to find "ESP-NOW Wireless", check "Enable ESP-NOW", then click "Save & Connect".
3. Long press any button on the WLED remote for 1 second, then go to "WiFi Setup", find "ESP-NOW Wireless", copy the field after "Last device Seen" to "Paired Remote MAC", then click "Save & Connect" to use the WLED remote control to control the WLED controller.



WLED-compatible remote controller >>>



GL-RC-001WL



GL-RC-002WL

Supported Chips >>>

WS2805, WS2811, WS2811F, WS2812B, WS2814A, WS2815,
SK6812, SM16703, SM16703SP3, FL19038, FW1935, UCS2903B, etc.

Troubleshooting and Solution >>>

Number	Symptoms	Solution
1	Indicator light is not on	Check whether the input power connection is correct
2	APP shows "offline"	1. Check if the phone is on the same network as the controller. 2. Check if the controller is out of the range of the WIFI connection, causing unstable connection. 3. Turn off and on the controller to retry.
3	APP is connected, but the light strip is not controllable	1. Check if the power supply is working properly. 2. Check if the power supply voltage matches the light strip. 3. Check if the input power connection is correct. 4. Check if the light strip connection is correct. 5. Check if the GPIO settings in the APP are correct. 6. Check if the light strip IC model in the APP is set correctly.
4	The brightness of the light strip is low, and the front and back colors are significantly different	1. Check if the power supply is working properly. 2. Check if the power supply matches the light strip. 3. Check if all connections are good, and use conductive and short wires as much as possible for connection. 4. Add power supply at an appropriate position. 5. Check if the APP has set a limit on brightness or current.



Attention

1. Before turning on the power, please ensure that all connections are correct and secure, and do not operate while the power is on.
2. The product should be used under the rated voltage. Using it under excessive or insufficient voltage may cause damage.
3. Do not disassemble the product, as it may cause fire and electric shock.
4. Do not use the product in environments exposed to direct sunlight, moisture, high temperatures, etc.
5. Do not use the product in metal shielded areas or around strong magnetic fields, as this may severely affect the wireless signal transmission of the product.
6. The controller is factory-equipped with a 20A fuse, and a spare 5A fuse is also included for your selection based on actual needs. The fuse's current-carrying capacity test is conducted at 25°C, and its lifespan decreases as the ambient temperature rises. When the operating current approaches or exceeds the rated value, the temperature will also increase accordingly. It is advisable to choose a fuse with a nominal current rating that is 1.3 to 1.5 times the operating current. For example, if the operating current is 10A, a 15A fuse should be selected.

Disclaimer

1. Our company will update the content of this manual based on the improvement of product functionality. The updates will be displayed in the latest version of this manual, without further notice.
2. Due to our continuous adoption of new technologies, product specifications may change without further notice.
3. This manual is provided for reference and guidance only and does not guarantee complete consistency with the actual product. The actual application should be based on the actual product.
4. The components and accessories described in this manual do not represent the standard configuration of the product. The specific configuration is subject to the packaging.
5. All text, tables, and images in this manual are protected by relevant national laws and may not be used without our permission.
6. This product may be compatible with third-party products, but our company does not take responsibility for compatibility issues or partial loss of functionality caused by changes in third-party products.